


Stepper Motor Driver  
(See driver documentation)

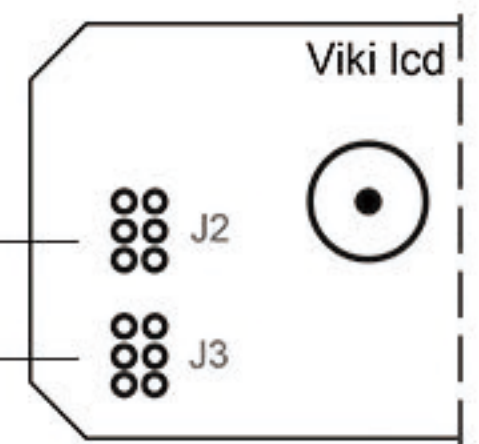

+5V GND  
I2C-SDA SCL-I2C  
ENCB ENCA


DO CD  
CLK DI  
BTN SS

(output for development)

GND  
3.3V  
+5V  
GND

GND  
MOSI  
+5V  
RST  
SCK  
MISO

Gnd +5v  
RST ok-key  
Previous Next  
Back lcd-rs  
lcd-w/r lcd-en  
SD-ss lcd-D4  
SD-MOSI lcd-D5  
SD-SCK lcd-D6  
SD-MISO lcd-D7  
SD-detect 3V3

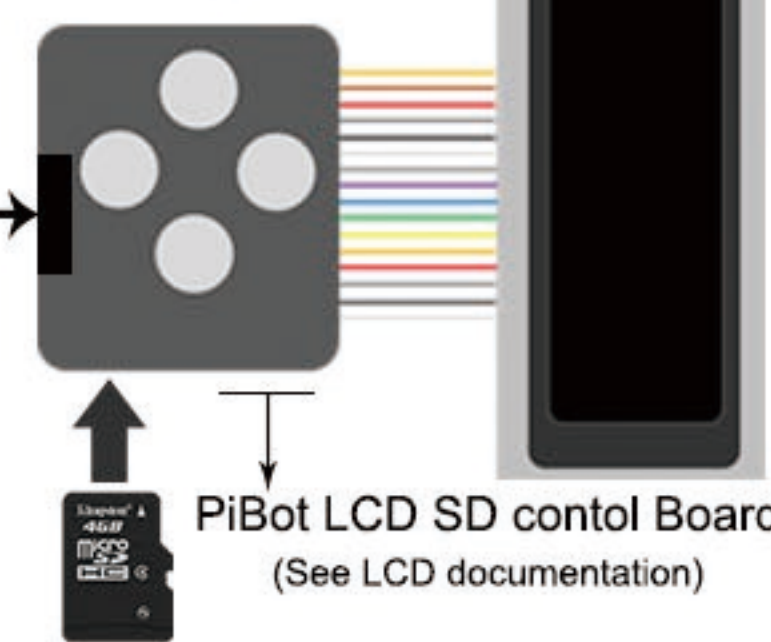

Thermistors I/O channel select

	0	1
Bit 1		
Bit 2		
Bit 3		

Firmware Setting	Bit3	Bit2	Bit1
0	0	0	0
1	0	0	1
2	0	1	0
3	0	1	1
4	1	0	0
5	1	0	1
6	1	1	0
7	1	1	1